


## Brief instruction SET LED Tool

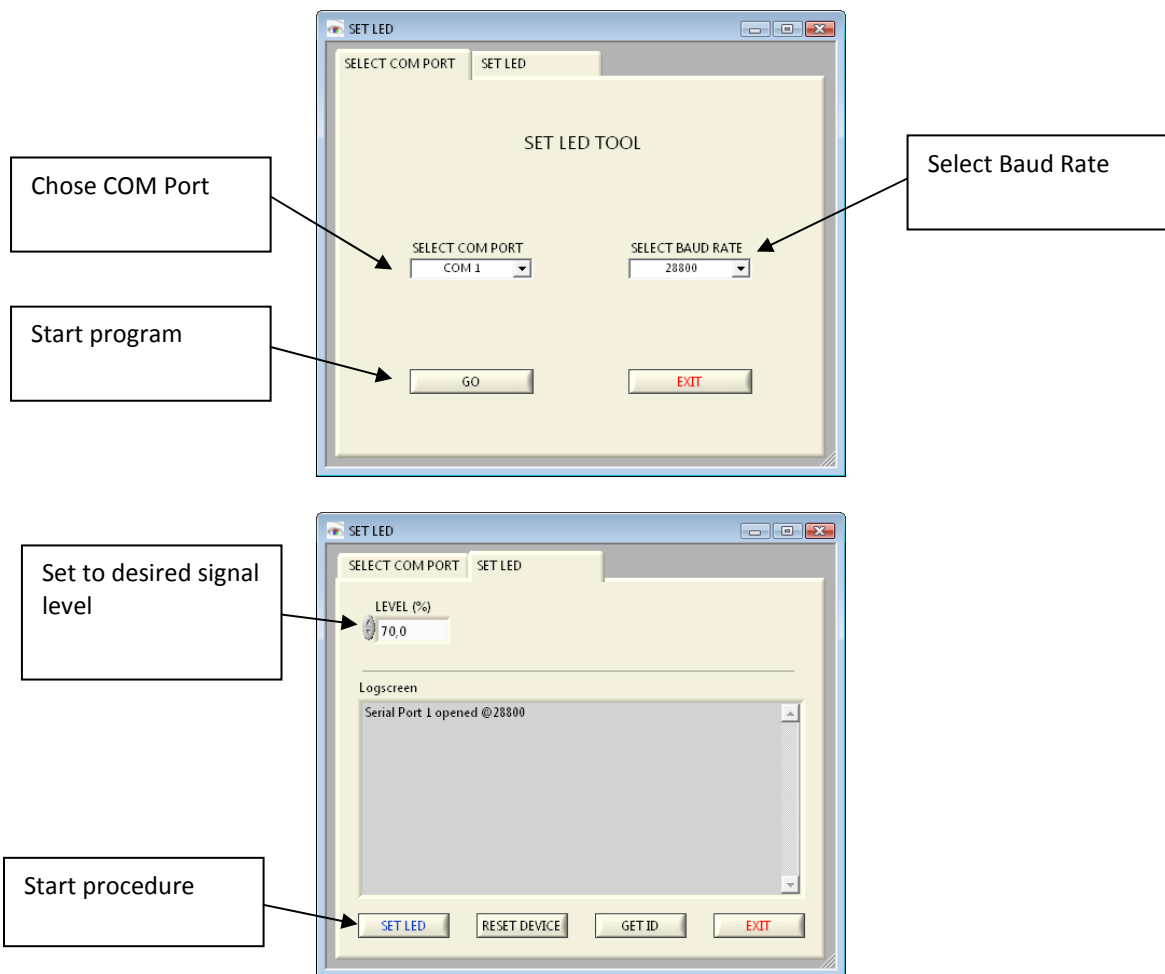

### Operational steps:

1. Position sensor sensing head above object
2. Execute program SET LED
3. Chose COM Port and start with „GO“
4. Adjust desired signal level with „LEVEL (%)“
5. Start procedure with „SET LED“

### Hint:

The sensor internally requires a minimum signal level. Therefore not every external signal level can be reached. In such a case a minimum internal signal level will be determined. The resulting external signal level cannot be determined.